



# Quick Start Guide

CP-650

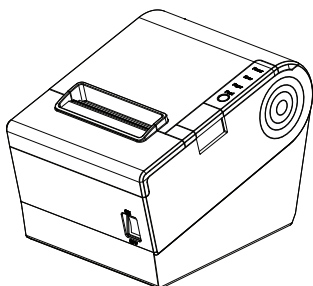

## Packing List

### ■ Standard



Printer



AC Adapter



Power Cord




CD



Quick Start Guide



USB Cable



Waterproof Cover




Ethernet Waterproof Buckle  
(Without Ethernet Cable)




Roll Paper

### ■ Optional



Cable Cover




Wall Mounting Kit

### Notes:


- 1) The power cord varies by country and region.
- 2) The items in the package depend on the actual order.

## Appearance and Components


### ■ Front View

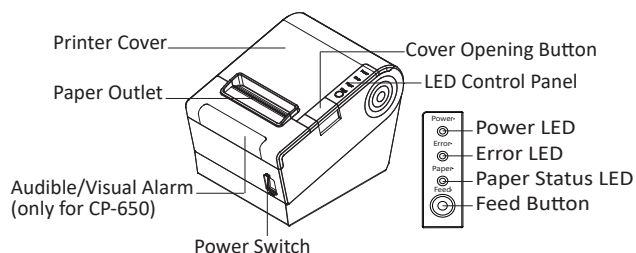

### ■ Rear View

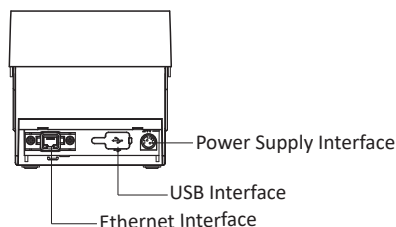


### ■ Inside View

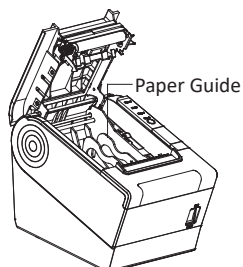


## Ethernet Waterproof Buckle Loading


1. Make the Ethernet cable get through the waterproof buckle lid.




2. Open the silicon block of the buckle lid, and put it on the Ethernet cable as shown below.

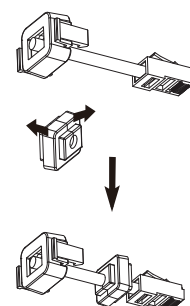


3. Adjust the incisions of the silicon block and the buckle lid to make them correspond to the shrapnel of the Ethernet cable head.




4. Plug silicon block and Ethernet cable head into the buckle lid, and make sure they are tight.




5. Plug the waterproof buckle into the waterproof base and press the waterproof buckle until they are tight.

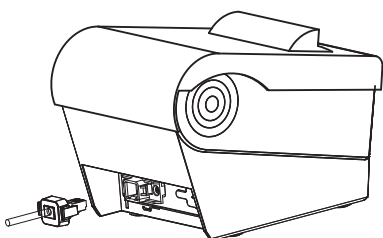

3. Pull out some roll paper, and close the printer cover.

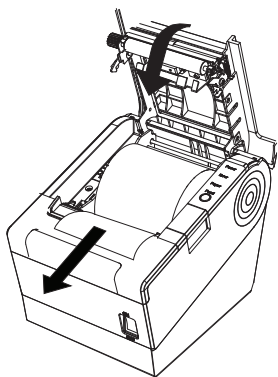


4. Tear the extra paper in the direction as shown below.

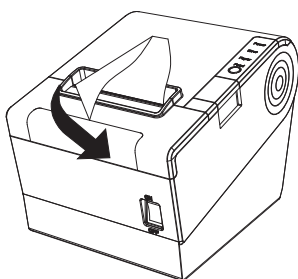


## Paper Loading

1. Press the cover opening button to open the printer cover.

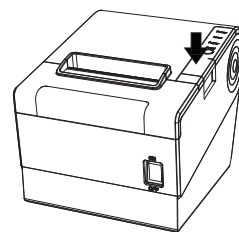

2. Load the paper roll in the correct direction as shown below.

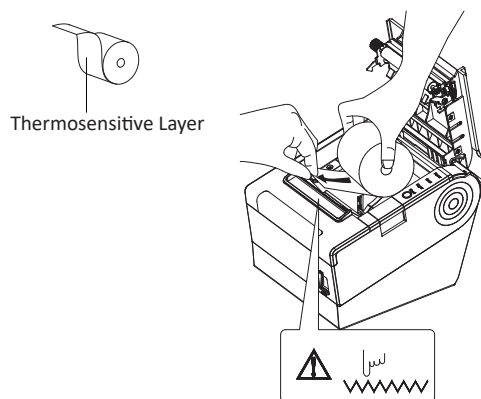

## Power Supply

1. Make sure the printer is "OFF".
2. Connect AC adapter to printer.
3. Connect power cord to AC adapter.
4. Plug the other side of power cord into the socket nearby.

